# CONFIGURAZIONE TP-LINK TL-WR841N

Questa breve guida guiderà l'utente alla corretta configurazione dei Router forniti da GioveADSL TP-LINK TL-W841N

#### Premessa: utilizzare sempre e solo le porte LAN (gialle) situate nel retro del router

Per prima cosa collegare un Pc tramite cavo ad una delle porte gialle del Router.

A questo punto bisogna configurare la scheda di rete del Pc:

andare nel **Pannello di controllo** dal pulsante START in basso a sx nel proprio schermo del Pc e aprire "Centro connessioni di rete"



#### Andare in "Modifica impostazioni scheda"



Doppio click su "Connessione alla rete locale (LAN)"



#### Cliccare su Proprietà

enerale			
Connessione —			
Connettività I	Pv4:	Nessun accesso a Interne	t
Connettività I	Pv6:	Nessun accesso alla ret	e
Stato support	o:	Abilitat	to
Durata:		06:50:3	6
Velocità:		100.0 Mbp	os
ttività ———	Inviati ——	Ricevu	
uttività Byte:	Inviati —— 1. 152. 407	Ricevu 8.937.55	
Attività Byte:	Inviati — 1. 152. 407	Ricevu   8.937.55	ш. ;2

## Doppio click su Protocollo internet versione 4

Connetti tramite:			
Intel(B) 82			
a incontry oz	566DC-2 Gigabit Network	Connection	
Protocol     A Protocol     A Protocol     A Rispond	diliaaa gli elementi eegue llo Internet versione 4 (T( 17/0 del mapping di indiv litore individuazione topol	Contigu P/IPv4) iduazione topologi ogia livelli di colleg	ia liv game
•			•
Installa	Disinstalla	Proprie	tà
Descrizione Consente al pr Microsoft.	oprio computer di accede	are a risorse in una	a rete

## Impostare indirizzo IP come dalla foto



Fare OK sulla finestra

A questo punto aprire il proprio Browser Internet( Explore, Chrome, Firefox ecc.)

Digitare l'indirizzi Ip dei default del Router 192.168.0.1

TL-WR841N × +						*
3 192.168.0.1	C Q. Cerco	1	合自	•	A 9	=
ladius Manager 3 - Ad 🛞 GioveADSL   Accesso 🛞 AdminLTE   Dashboard 🛞 GioveADSL   Content F 🛞 Ind	lex of /mkt/fatture/ Z Panoramica del pubbli 🧾 Marketing 📔 Anonima Tor 🧾 Grafica 📒 HotSpot 🦲 spettacoli 📒	Spy 🔒 IpTv 🔒 linu	n 🦲 Mobi	le		>>
TD-I INK'			300M V	Vireless	N Router	
		M	odel No. TL	WR841N7	L-WR841ND	
	1					
	*)					
	Login					
	Copyright © 2015 T7-LDVC Technologies Co., 128. All rights reserved.					

Inserire nome utente admin e password admin e cliccare su Login

## Nel menù a sinistra selezionare Wireless poi Wireless setting

Impostare nome del Wi-Fi e la nazione Italy, impostare **Channel** con un canale fisso (es. Channel 6) e cliccare su tasto **Save** in fondo alla pagina

TP-LINK <sup>®</sup>					
Status					
Quick Setup	Wireless Settings				
WPS	BAN STANA DALIONALANA - MA				
Network	Wireless Network Name:	Cigura ADEL 1324		(Also called the SSID)	
Wireless	Witeless Network Name.	GIOVEADSL_1234		(Also called the SOLD)	
- Wireless Settings	Region:	Italy	•		
- Wireless Security	vvarning:	Ensure you select a Incorrect settings m	av cause inter	ry to conform local law. Iference.	
- Wireless MAC Filtering					
- Wireless Advanced	Mode:	11ban mixed	+		
- Wireless Statistics	Channel Width:	Auto -			
DHCP	Channel	6 -			
Forwarding	Chaimei.	•			
Socurity					f

## Andare in Wireless security a sinsistra

TP-LINK	0			
Status				
Quick Setup	Wireless Security			
WPS				
Network	- Disable Security			
Wireless	S Disable security			
- Wireless Settings			_	
- Wireless Security	WPA/WPA2 - Personal(Recom	nended)		
- Wireless MAC Filtering	Version:	Automatic -		
- Wireless Advanced	Encryption:	Automatic 👻		
- Wireless Statistics	Wireless Password:	12345678		
DHCP		(You can enter ASCII characters between 8 and 6	3 or Hexadecimal characters between 8 and 64.)	
Forwarding	Group Key Update Period:	0 Seconds	f	fig.9

Selezionare il tipo di password (consigliato WPA/WPA2-Personal)

Impostare la password del proprio Wi-Fi e selezionare **Version** automatic e **Encryption** automatic e cliccare su tasto **Save** in fondo alla pagina.

Andare a sinstra nel menù DHCP poi DHCP Setting e disabilitare come da figura

TP-LINK				
Status				
Quick Setup	OHCP Settings			
WPS	Signal Statements			16 1
Network	DUCD Group	O Dischle O I	Tankla	
Wireless	DHCP Server:	Olisable	chable	
DHCP	Start IP Address:	192.168.0.100		
- DHCP Settings	End IP Address:	192.168.0.199		
- DHCP Client List	Address Lease Time:	120 minute	s (1~2880 minutes, the default value is 120)	
- Address Reservation	Default Gateway:	192.168.0.1		
Forwarding	Default Domain:		(Optional)	
Security	Primary DNS:	0.0.0.0	(Optional)	
Parental Control	Secondary DNS:	0.0.0.0	(Optional)	
Access Control	becondary bird.	1	NEP DEVICE	
Advanced Routing				
Bandwidth Control		Save		

Il router dovrà essere riavviato come da figura sotto.

TP-LIN	K°		
Status Quick Setup	DHCP Settings		
Network Wireless DHCP - DHCP Settings - DHCP Client List - Address Reservation Forwarding	DHCP Server: Start IP Address: End IP Address: Address Lease Time: Default Gateway: Default Oomain:	Disable Enable      192.168.0.100      192.168.0.199      120 minutes (1-2880 minutes, the default value is 120)      192.166.0.1      (Optional)	
Security Parental Control Access Control Advanced Routing	Primary DNS: Secondary DNS: The change of DHCP config will not take effe	0.0.0.0 (Optional) 0.0.0.0 (Optional) t until this device reboots, prease <u>click here</u> to reboot.	
Bandwidth Control IP & MAC Binding		Save	fi

Digitare nuovamente nel Browser 192.16.0.1 e immettere nome utente admin e password admin

Andare nel menù a sinistra Security poi Remote management e impostare come da foto

TP-LINK	•			
Status Quick Setup WP S	Remote Management			
Network Wireless DHCP	Web Management Port: Remote Management IP Address:	80 255.255.255.255	(Enter 255 255 255 255 for all)	
Forwarding Security - Basic Security		Save		 
Advanced Security     Local Management     Remote Management				fig.1

Andare nel menù a sinistra **Access control** poi **Rule** e impostare come da foto

TP-LIN	K.	
Status		
Quick Setup	Access Control Rule Management	
WPS		
Network	V Enable Internet Access Control	
Wireless		
DHCP	Default Silter Delicy	
Forwarding	Denduit ritter Policy	
Security	Anow the packets specified by any ellaber access control poncy to pass infolgentie Router	
Parental Control	Deny the packets specified by any enabled access control policy to pass through the Router	
Access Control	Save	
- Rule	4	
- Host	D Bula Nama Hast Tarast Sabadula Statua Madifu	
- Target	ID Rule halle nost larget scileulie status mouliy	
- Schedule	Setup Wizard	
Advanced Routing		
Bandwidth Control	Add New Enable All Disable All Delete All	
IP & MAC Binding		
Dynamic DNS	Move ID To ID	
System Tools		10
Logout	Dravique Next Current No. 1 - Page	10
	Previous Next Guilentito, I + Lage	
		fie

Andare nel menù a sinistra Network poi Lan e impostare indirizzo Ip 192.168.1.250

Cliccare su tasto Save

Ripetere i passaggi da fig.1 a fig.6 e impostare indirizzo Ip automatico come da figura

natica de contrari	lle imp		
oostazion	o, sara ii IP co	necess rrette.	ni IP se la sario
o IP			
	•	at.	
	18		
τ.	- ic)	- 54	
ticament	e		
IS:			
	•))	3	
	3.0	2	
		Ava	nzate
	o IP ticament IS:	o IP	o IP

A questo punto collegare il cavo Lan che parte dall'alimentatore della CPE Antenna in una delle porte Lan del Router